

# CONNECTED

# WEAR

by *fibretronic*™



*wearable technology*



# IPBT


# iPod & Bluetooth Controller



# IPBT iPod & Bluetooth Controller

## CONNECTION INSTRUCTIONS

Connect any CONNECTED-wear Keypad or Joystick controller to the IPBT module using the Jack Plug. Connect the IPBT module to the iPod via the Dock Connector and pair the module with your mobile phone. Connect the Microphone (supplied) and your Earphones (not supplied) to the IPBT Module as shown.

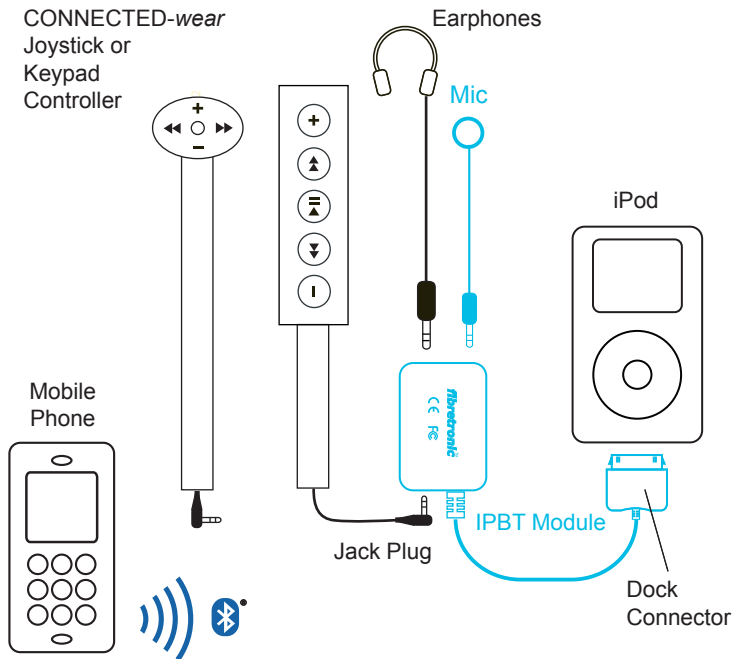






NOT DRAWN TO SCALE

# OPERATING INSTRUCTIONS

To operate the Keypad controller simply press the flexible buttons. To operate the Joystick controller toggle the flexible stick to the right, to the left, upwards or downwards. Push the Joystick in the centre for Play/Pause.







## iPod Control Menu

KEY	ACTION	iPOD FUNCTION
	Press / press & hold	Increase the music volume
	Press Press and hold	Skip to next track Fast forward through a track
	Press Press and hold	Toggles between Play and Pause Turns iPod off
	Press Press and hold	Skip to previous track Rewind through a track
	Press / press and hold	Decrease the music volume

## Pairing IPBT Module to Mobile Phone

To pair your mobile phone with the IPBT module, first make sure the IPBT module is switched OFF. Then press and hold the Play/Pause key for ~ 6 seconds until a Red/Blue light appears. When prompted, enter the pairing code 0000 on your mobile phone. When paired successfully the Red light will stop flashing and only the Blue light continues to flash.

# Phone Control Menu

KEY	FUNCTION	ACTION
	Power ON	Press and hold ~4 sec (blue light appears)
	Power OFF	Press and hold ~4 sec (red light appears)
	Pairing	Press and hold ~6 sec (blue/red light appears)
	Answer call	Short press when phone rings (< 1 sec)
	Reject call	Long press when phone rings (> 1 sec)
	End call	Short press during call (< 1 sec)
	Transfer call back to phone	Long press during call (> 1 sec)
	Re-dial last call	Double short press (< 1 sec)
	Volume Up	Press to increase the call or ringing volume
	Volume Down	Press to decrease the call or ringing volume.
 	Mute & un-mute the Mic during a call.	Short press of <b>+</b> & <b>-</b> keys together during a call.
	Activate voice dialling during Standby.	Short press of <b>+</b> & <b>-</b> keys together during Standby.



## BATTERY CHARGING INSTRUCTIONS

To charge the IPBT module, plug the USB cable into the mini USB socket on the module. Plug the other cable end into a USB socket on your computer or other USB charging device. A red light will appear on the IPBT module whilst charging. When the battery is fully charged the red light will disappear.

## CARE INSTRUCTIONS

Please follow the garment manufacturer's care instructions listed on the apparel item. **DO NOT WASH OR DRY CLEAN THE IPBT MODULE OR THE MICROPHONE.** Disconnect and remove the IPBT module and Microphone from the garment before cleaning. After washing, ensure the Keypad and Joystick controllers are thoroughly dry before use.



**DO NOT WASH IPBT MODULE. DO NOT WASH MICROPHONE.**

## GENERAL SPECIFICATIONS

Product Code	IPBT
Weight	< 30g
Power Source	Rechargeable Lithium Ion Battery
Battery Life	10 hours talk time, 10 days standby
Charge Time	~ 2 hours
iPod Connection	30 pin dock connector
Bluetooth Version	V2.0 + EDR
Approvals	CE, FCC, RoHS
iPod Compatibility	All iPods with dock connector


# CONNECTED

WEAR  
by fibretronic™



# IPBT

The IPBT module with Bluetooth allows you to control your iPod and your mobile phone from your garment or bag. Plug the IPBT module into any product that has a CONNECTED-wear Keypad or Joystick controller.

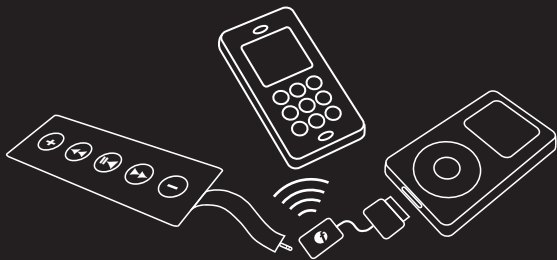

## iPod Compatibility

The IPBT module is compatible with all iPod players except; iPod 1st Generation, iPod 2nd Generation and iPod Shuffle. This is a 'Made for iPod' licensed product.



CONNECTED-wear, by Fibretronic, is a unique system of integrated controls in garments, bags and other soft goods. CONNECTED-wear Keypad and Joysticks can control audio players, mobile phones and other personal electronics. Just select the CONNECTED-wear module of your choice and get CONNECTED....

[www.connectedwear.com](http://www.connectedwear.com)



iPod is a trademark of Apple Inc., registered in the U.S. and other countries

CONNECTED-wear and Fibretronic are trademarks of Fibretronic Limited

iPod & Bluetooth Controller